

FIRST EXPERIENCE GUIDE



1 SELECT BIDET MODE

Turn the bottom mode knob to switch between Rear Wash Mode and Nozzle Clean Mode.

TIP: To keep your bidet clean, periodically use the Nozzle Clean mode

REAR WASH

Water sprays towards the rear for a refreshing clean.

NOZZLE CLEAN

Runs fresh water over nozzles for an easy clean.



2 TURN KNOB TO WASH

Turn the top water pressure knob to the right to increase water flow.



3 DRY OFF

Leave the bathroom feeling confident, fresh, and clean!

Thank you for trying out a LUXE Bidet.
We hope you enjoyed your first experience and
would love if you spread the word!

Questions? Contact us at customercare@luxebidet.com
For more information, visit www.LuxeBidet.com

