


Bidet Toilet Seat

Please read this manual carefully
before use and keep it properly

Model: WL-GB05-4AD-US
WL-GB05-5AD-US

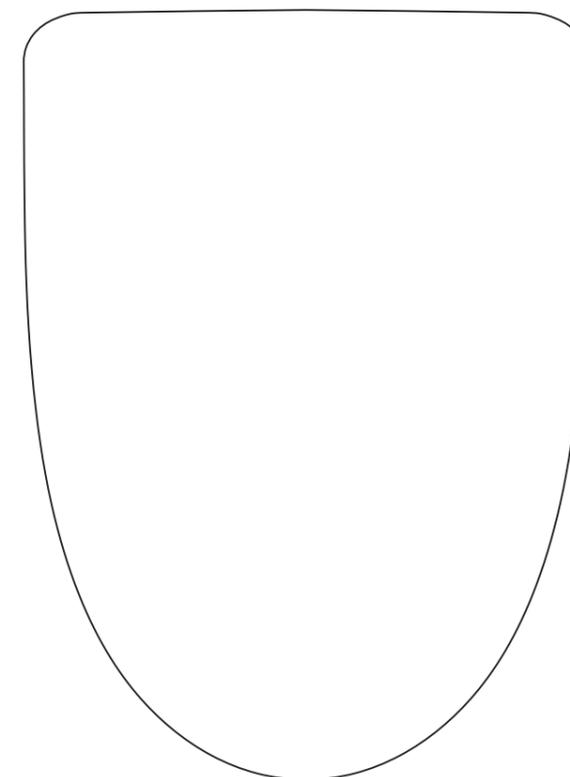

Correct specifications depend on the actual model.
All specifications are subject to change without prior notice.

Content

Important safeguards	3-4
Functional differences of different models	5
Safety precautions	6-10
Part name	11-12
Product installation	12-17
Confirmation before use	18
How to use	19-22
Function description	21
Cleaning procedure	23
Not in use for long time	24
Quick judgment and maintenance for the trouble ..	25-26
Technical parameters	28

Before starting installation work, read the manual carefully
If you encounter any problems in installation or performance, please be sure to contact us.
Our contact information is on the bottom page of the manual.
There is a guarantee in this manual, so please keep it properly and take it out for reading when necessary

■ IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER— Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the connection should be made by qualified service personnel.

CAUTION: Risk of property damage. If it is necessary to use an extension cord, a single cord may be used provided that the “Type” begins with “SJ”, the cord is a 12 gauge, grounded (12/3), is no longer than 25 feet (7.6 meters), and is plugged into a GFCI* electrical outlet. Promptly replace an extension cord that exhibits any sign of damage.

DANGER— To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.

4. Keep the cord away from heated surfaces.

5. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

6. Never use while sleeping or drowsy.

7. Never drop or insert any object into any opening or hose.

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. Connect this product to a properly grounded outlet only. See Grounding Instructions.

10. Unplug this product before filling. Fill (reservoir) with water only unless otherwise specified by manufacturer. Do not overfill (or specify filling instructions).

SAVE THESE INSTRUCTIONS

■ IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

WARNING – To reduce the risk of fire, electric shock, or injury:

1. Do not leave Appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
3. Use only as described in this manual. Use only manufacturer's recommended attachments.
4. Do not use with damaged cord or plug. If Appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run Appliance over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle plug or Appliance with wet hands.

SAVE THESE INSTRUCTIONS

Please use the new hose assembly included with the product. Do not reuse old inlet hose.

WARNING: IF CONNECTION IS MADE TO A POTABLE WATER SYSTEM, THE SYSTEM SHALL BE PROTECTED AGAINST BACKFLOW

Functional differences of different models

Please confirm the model you purchased first, and then check the corresponding function. The model and specification can be found on the nameplate at the rear of the machine.

○ indicates that the function is available and the blank indicates that no such function.

Functions		Models	
		WL-GB05-4AD-US	WL-GB05-5AD-US
Basic functions	Seat heating	○	○
	Water heating	○	○
	Rear/front Wash	○	○
	Warm air drying	○	○
Additional functions	Auto lid open/close	○	○
	Lid slow close	○	○
	Auto flushing		○
	Smart Remote Control	○	○
	Moving wash	○	○
	H/C Massage	○	○
	Enema Wash	○	○
	Antibacterial seat	○	○
	External filter	○	○
	Energy saving	○	○

SAFETY PRECAUTIONS

In order to prevent hazards and property losses caused by users and others, please read the safety precautions in detail to use this product correctly

The following information is related to safety, please pay special attention!

- The logo and its meaning are described below

 Warning	It means that if you ignore this sign and misoperate, you may cause serious injury or death.
 Caution	It means that if this sign is ignored and mis-operated, personal injury or financial loss may be caused.

Sign	This sign means: Description
	This sign means: Enforce obedience.
	This sign means: Prohibit
	This sign means: No disassembly or refit
	This sign means: Keep dry
	This sign means: No touching with wet hands.
	This sign means: Ground Connection.
	This sign means: No high temperature and flammable objects.

WARNING

Do not splash the product with water.



May cause fire or electric shock.



※Reminder: Children, people with physical (intellectual) defects and lack of experience or common sense should be accompanied by special personnel when using this product. This product must be connected with cold water supply (water inlet temperature is 1-40°C), otherwise it may burn or machine failure.

WARNING

If you ignore this sign and operate incorrectly, it may cause danger!



Check whether the power socket is grounded.

- This product must be well grounded and can only be connected to the special 120V, 60Hz, 10A circuit with grounding fault short circuit or grounding leakage protector.



Ground connection
The appliance have to be earthed.



Remove the dust on the plug and completely insert the plug into the socket.

- Pull out the plug and clean it with a dry cloth.



Enforce obedience




It is only suitable for AC voltage of 120V (60Hz).

It is forbidden to use too much load on the same socket.

- May overheat or cause fire.



Prohibit

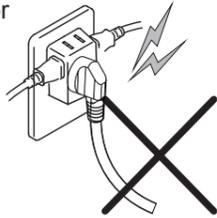


Do not use loose sockets.

- May cause fire or electric shock.



Prohibit

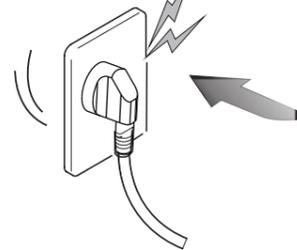


Do not plug/unplug the power plug when your hands are wet.

- May get electric shock hazard.



No Wet Hand

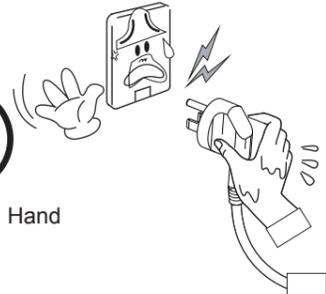


Do not pour water or detergent on the body or power plug.

- May cause fire or electric shock.



Keep dry

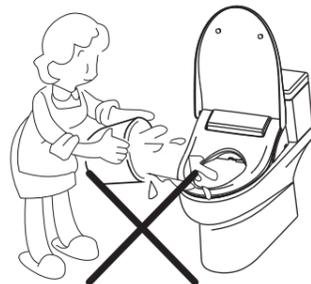

WARNING

If you ignore this sign and operate incorrectly, it may cause danger!



Do not pull the power plug or power cord at will.

- May cause fire or electric shock.



Prohibit



Ensure that the product uses tap water, and do not use other water sources other than tap water that do not meet the sanitary standards.

- May cause skin infection.
- May cause machine failure.



Prohibit



Please pull out the plug before cleaning the product.

- May get electric shock hazard.



Pull off the plug.




Do not disassemble or refit the product by yourself.

- May cause fire or electric shock.



No disassembly

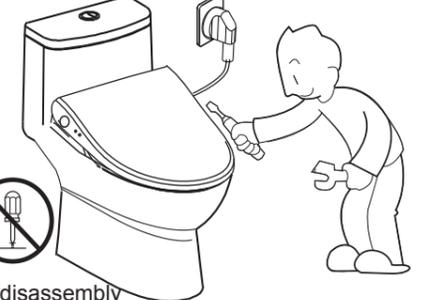

Do not put high temperature and inflammables near the product.

- May cause fire.



No high temperature




Do not bend or twist the water hose.

- May be leaking.



Prohibit

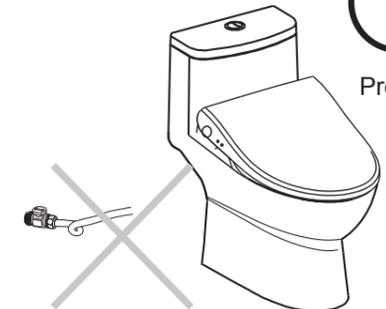

WARNING


If you ignore this sign and operate incorrectly, it may cause danger!



Do not place heavy objects on the seat ring or cover.
● May damage the product.



Do not use the following items to clean this product. Benzene, paint thinner, decontamination powder, nylon brush, etc.
● May damage the product.

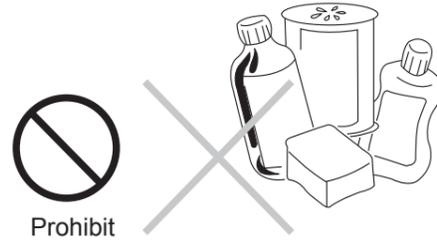

Do not close the seat cover and seat ring with force.
● May damage the product.




When replacing the power cord, observe the following:

- If the power cord is damaged, contact the retail store where you purchased this product or the nearby customer service center.
- Only authorized technicians can replace the power cord.



Enforce obedience.

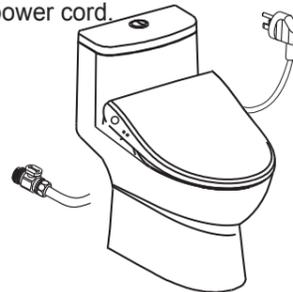


WARNING


Please follow the following guidelines



Do not expose the product to direct sunlight.
● May causes discoloration, plastic corrosion and damage.

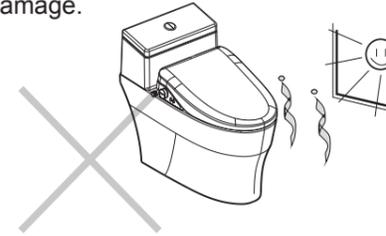


Do not use DC or AC power supply with voltage not 120V.
● May cause product fault.

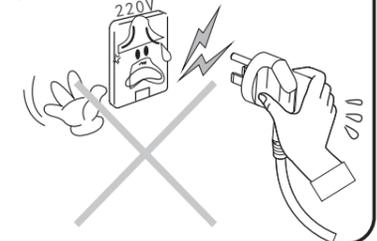


When using the product, make sure you don't lean against the cover.
● The cover may be damaged.




Do not pour urine on the body and nozzle.

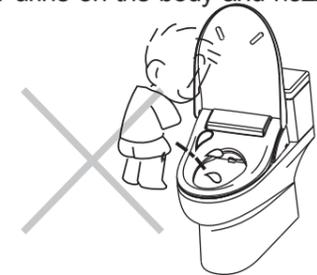

Part name

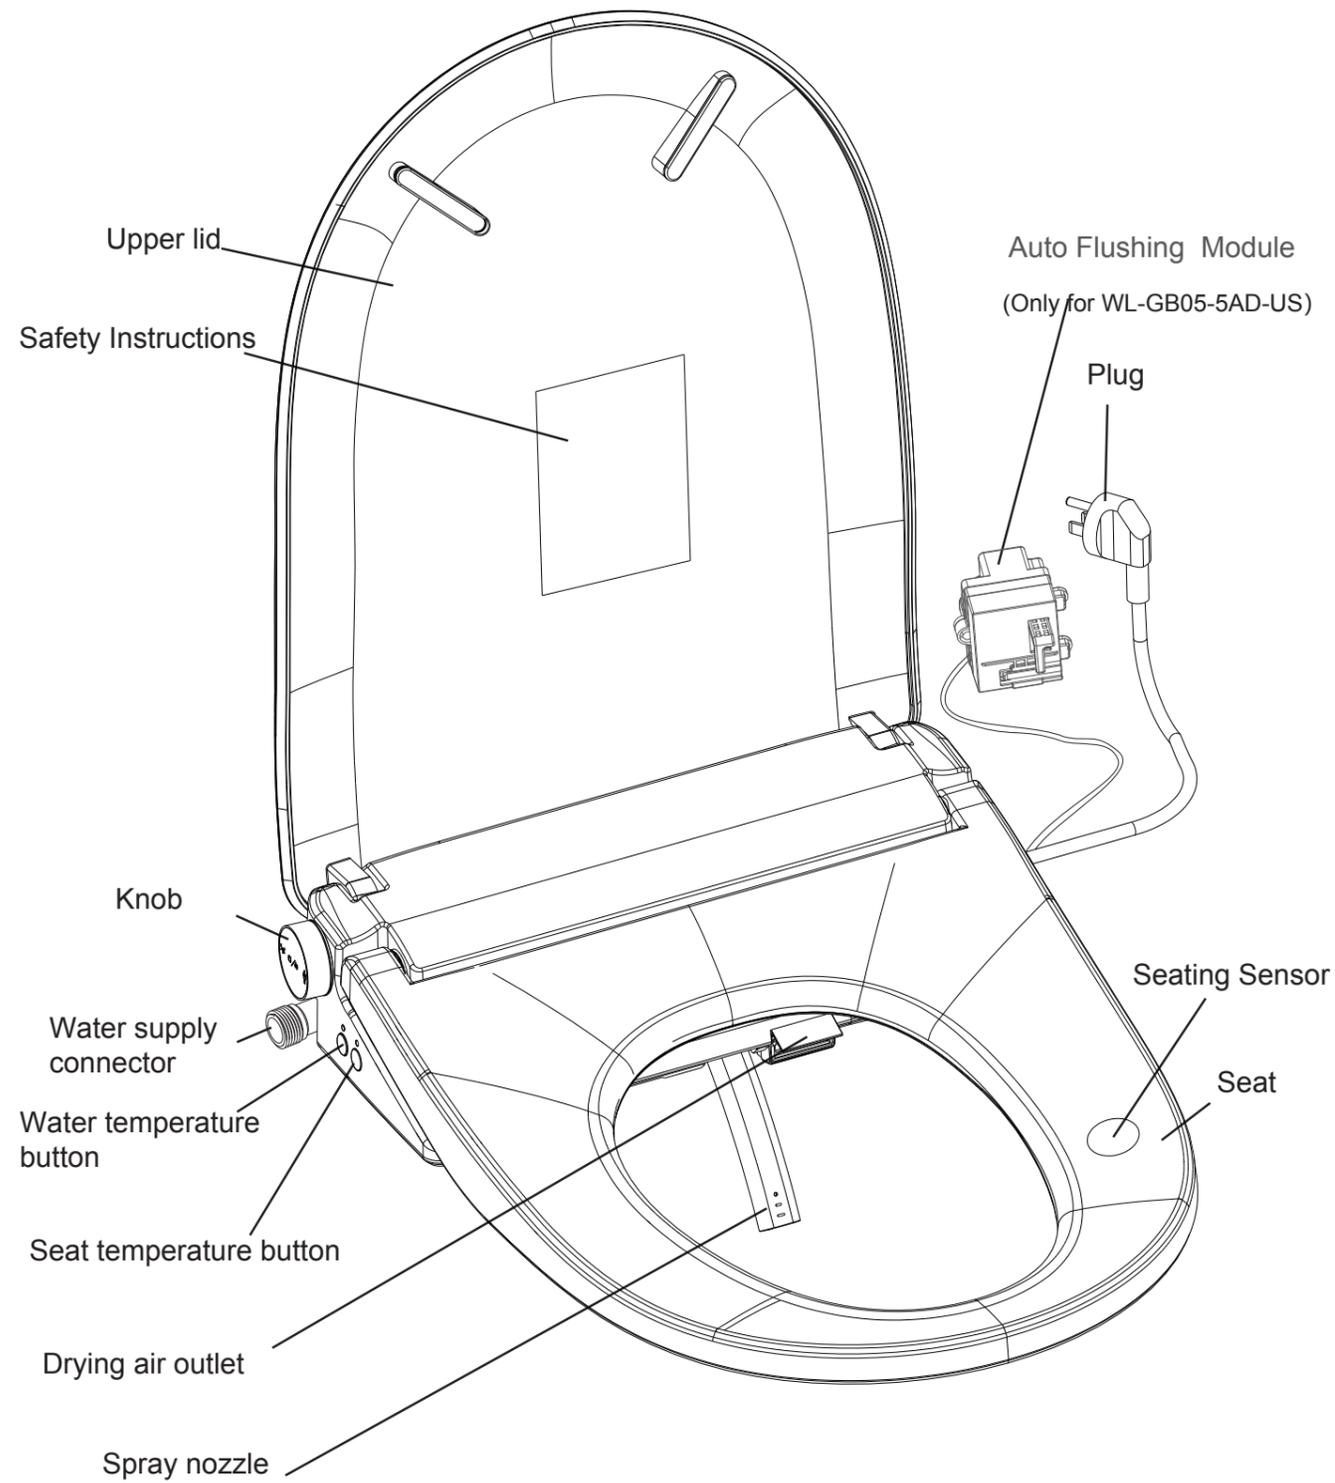

Part name

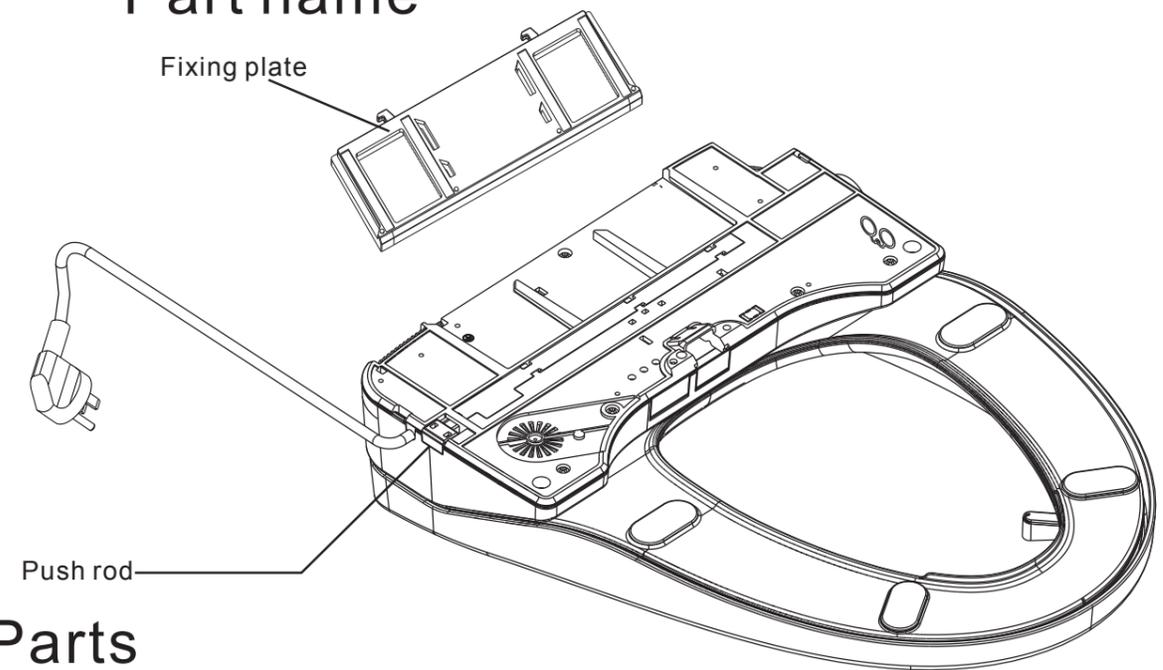


Parts

NO.	Name	Quantity	Sketch	Remark	NO.	Name	Quantity	Sketch	Remark
1	Main part	1pcs			6	Remote control & remote control guide	1pcs		
2	Accessories					Remote control Holder	1pcs		
	Fixing plate	1pcs				Expander body	2pcs		
	Adjust Block	2pcs				Screw	2pcs		
	Expansion bolt	2pcs							
3	Waterway accessories				7	Automatic flushing module	1pcs		
	Tee joint	1pcs				Small clamp collar Top outer diameter of fittings is from 63 to 72 (applicable)	1pcs		This part are only for model WL-GB05-5AD-US
	Waterway accessories	1pcs				Large clamp collar Top outer diameter of fittings is from 73 to 79 (applicable)	1pcs		
	External filter	1pcs		Optional		Screw (For fastening clamps)	4pcs		
						Push rod adjusting block The push rod has been pushed to the button surface (not used)	1pcs		
4	User's manual	1pcs							
5	Installation cardboard	1pcs							

Product installation

Size requirements of adapter cover

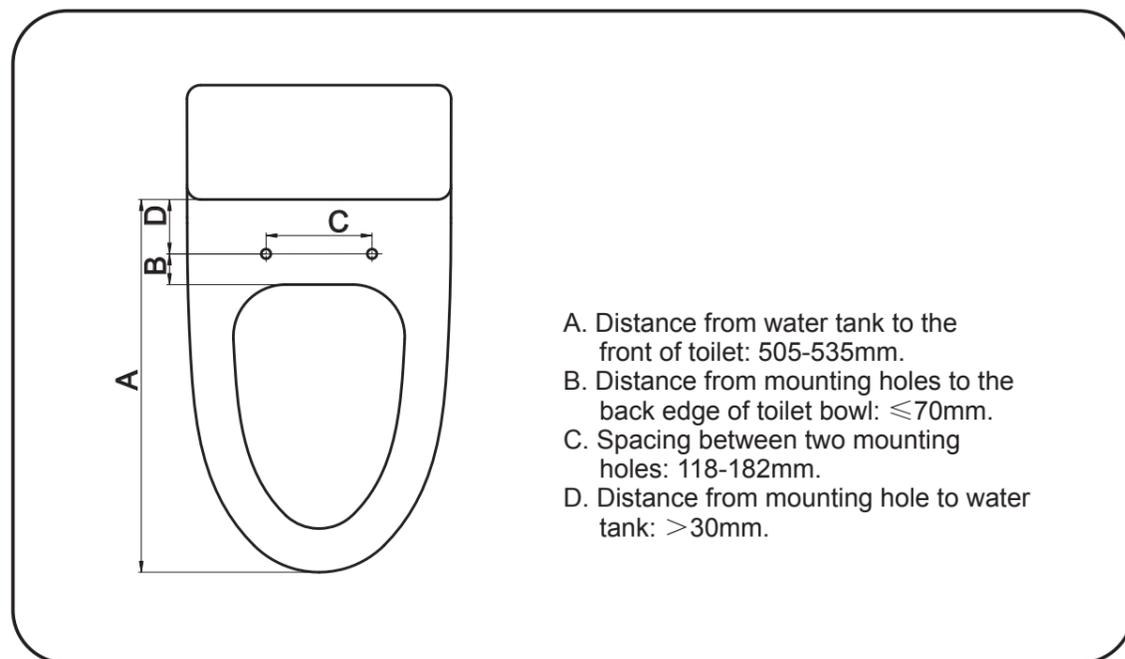

Preparation before installation

Before installing the smart toilet cover:

1. Remove the existing toilet cover and close the water supply system of the toilet cover.
2. Press the flush button to release the pressure from the water supply pipe.
3. Place a container under the inlet valve to fill the excess water.
4. Close the water inlet angle valve and disconnect the connection between the water inlet valve of the toilet cover and the water supply pipe.

Caution: When determining the outlet position of the circuit, it is necessary to follow the local standards.

Water inlet angle valve




Install circuit outlet:

1. Before installation, please reserve a power socket within about 1m on the right side of the toilet.
2. It is recommended to use waterproof socket instead of extension cord connection products.


※All ceramic body outline drawings in this manual are for demonstration only.

Product installation

Install the fixing plate

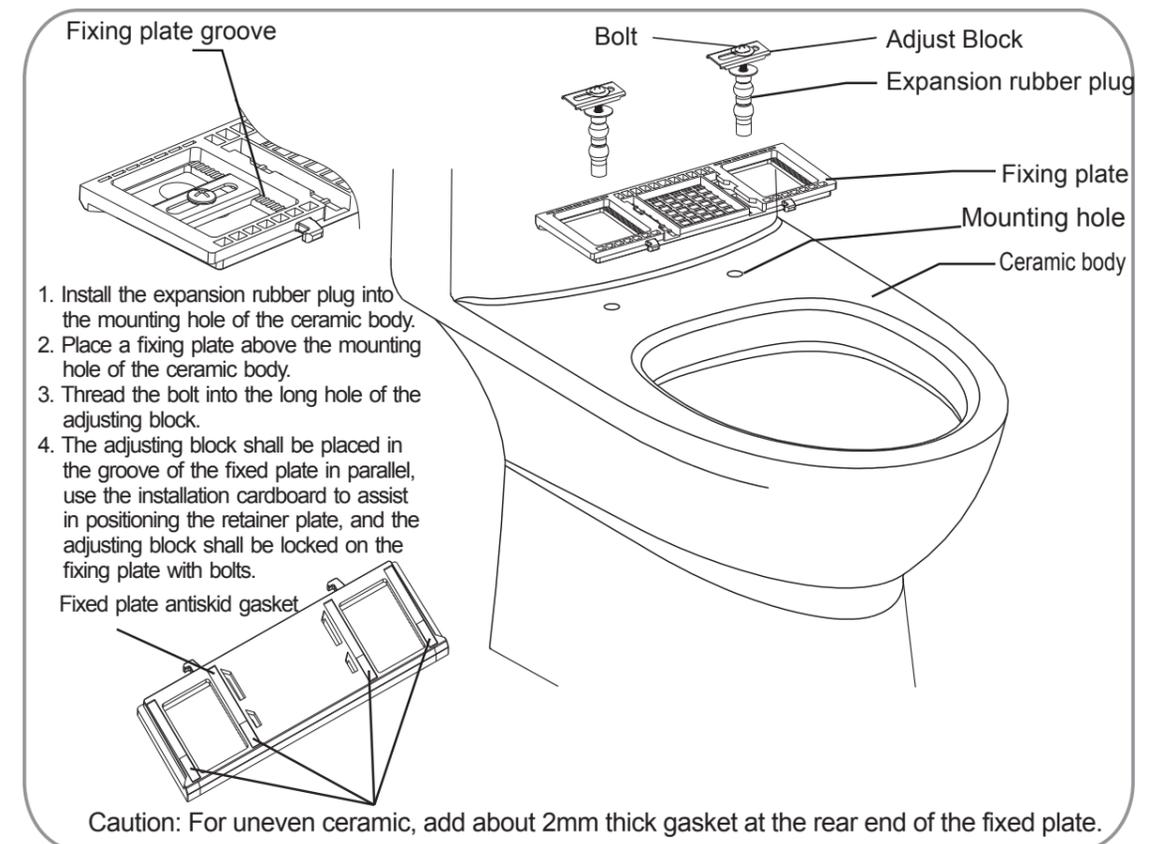

Install the toilet lid

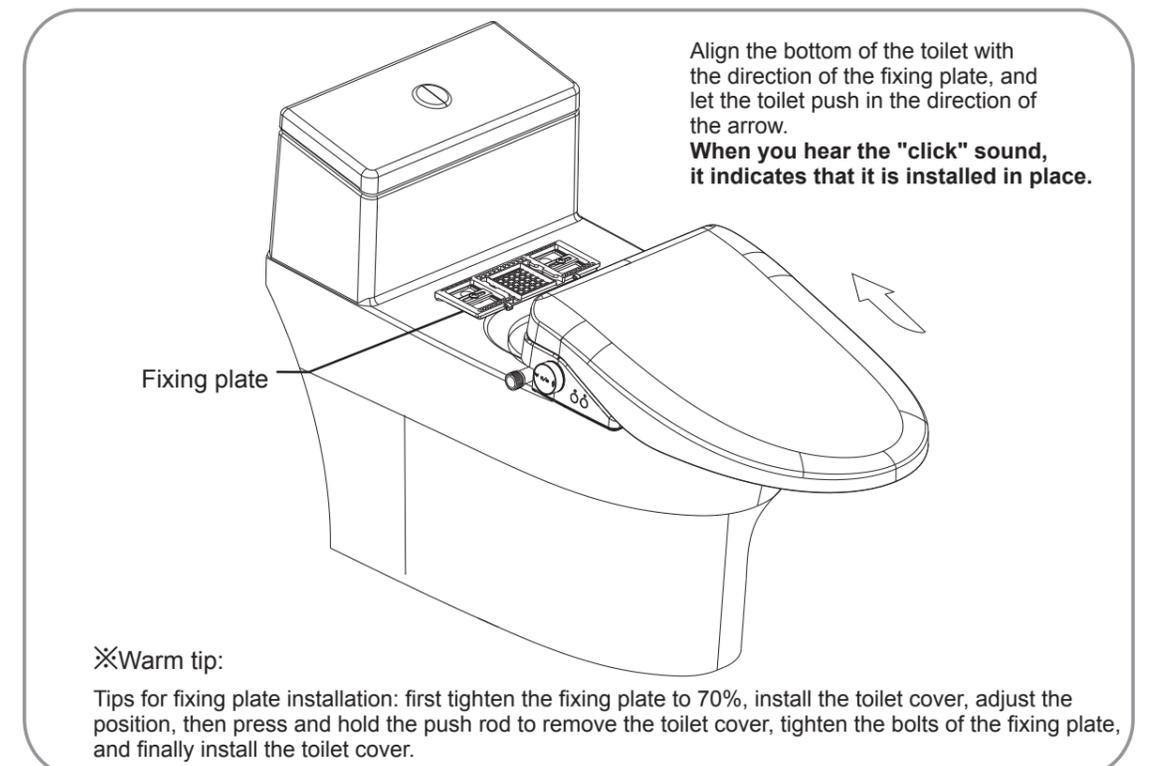

Product installation

Install external automatic flushing accessories (Only for model WL-GB05-5AD-US)


1. Dimension confirmation before installation

1. Turn off the power and water.
2. Open the toilet tank cover.




Toilet tank cover

3. Measure the outer diameter and height of the top of ceramic fittings. The diameter should be between 63 and 79 and the height should be above 18. Otherwise, this automatic flushing module is not applicable.

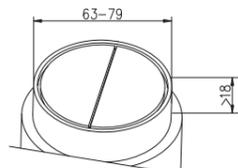


4. Select the clamp according to the measured outer diameter of the top of the fitting. When the outer diameter of the top of the fitting is from 63 to 72, select the small clamp collar. When the outer diameter of the top of the fitting is from 73 to 79, select the large clamp collar.
5. Clamp the selected clamp collar into the host along the track. When you hear a click, it means that it is installed in place.

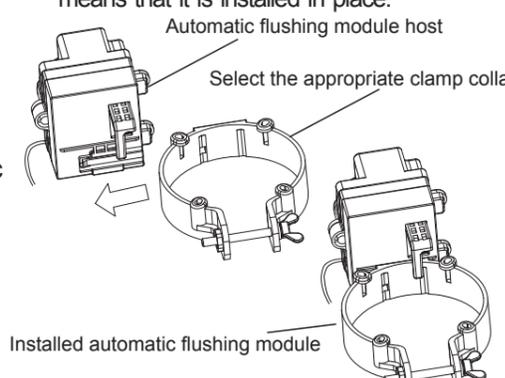

Automatic flushing module host
Select the appropriate clamp collar
Installed automatic flushing module

1. Installation and fixation of flushing module


1. Insert the automatic flushing module into the top of the fittings as shown in the figure.
2. Make sure the push rod is aligned with the flush button. If the push rod cannot press the flush button, insert the push rod adjusting block into the push rod.
3. Tighten the butterfly screw to ensure reliable fixation.
4. Tighten 4 locking cross stitch screws.
5. Fix the power cord at the screw position with a tie and lead out the power cord (The wire should preferably pass through the groove on the top of the water tank, and some water tanks do not have this groove).
6. Turn on the water source, connect the power supply, and test the manual and automatic flushing functions.
7. Close the water tank cover and installation is complete.

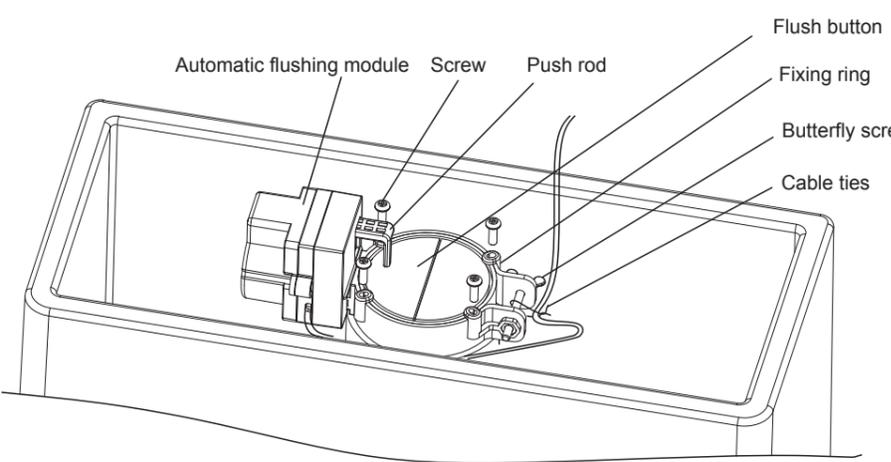

Flush button
Automatic flushing module
Screw
Push rod
Fixing ring
Butterfly screw
Cable ties

Product installation

Power on and water supply

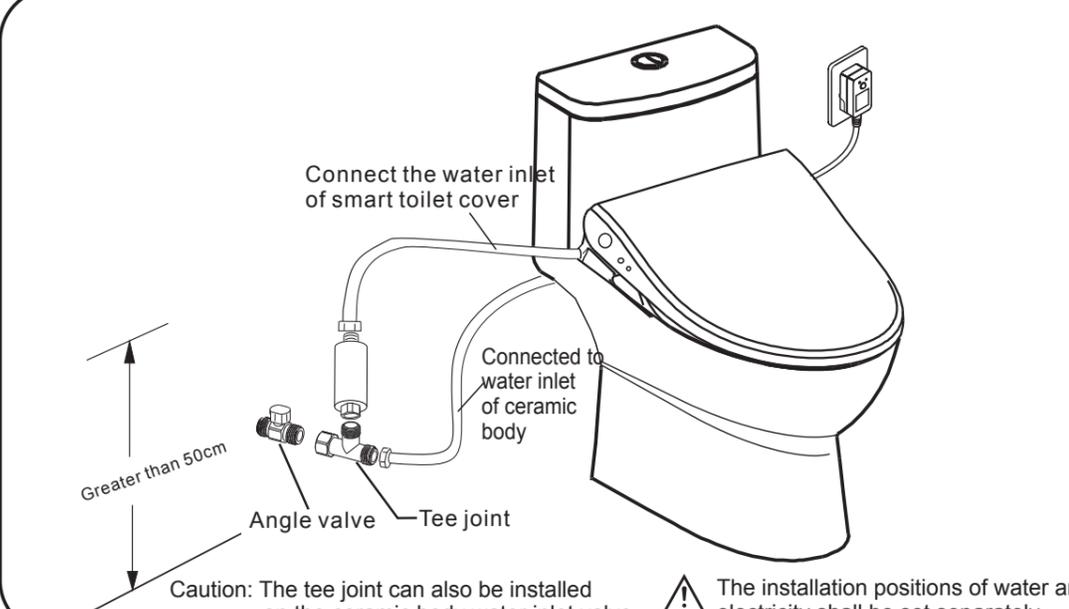


Connect the water inlet of smart toilet cover
Connected to water inlet of ceramic body
Angle valve
Tee joint
Greater than 50cm
Caution: The tee joint can also be installed on the ceramic body water inlet valve.

⚠ The installation positions of water and electricity shall be set separately.

Connect the water supply

Connect the external water source with the water inlet with the equipped hose and filter screen.

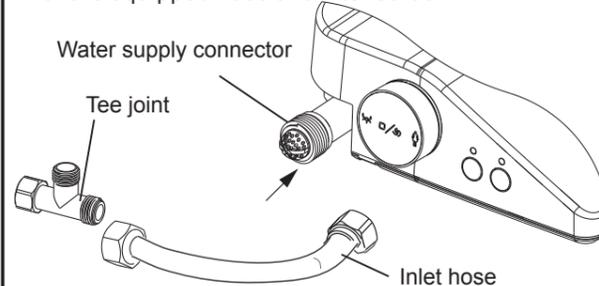


CAUTION

The plug shall be connected to an effectively grounded socket. Otherwise, electric shock may be caused in case of power failure or leakage.



Turn on electricity

1. Install 120V (more than 10A) socket at a position above 50cm from the ground.
2. The socket shall be installed where the water is not easy to splash.
3. Use a grounded socket.
4. Insert the power plug of the product into the socket.

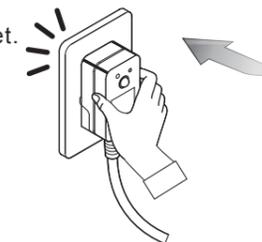

WARNING!

Please connect the power supply according to the product power supply requirements, otherwise it may cause product fault.



Product installation


Remote control installation

Installation method I


1. Remove the EVA adhesive sticker on the back of the remote control guide and remote control holder.(as shown in Figure 1 and Figure 2).
2. Stick the remote control guide and remote control holder at the verified position.(as shown in Figure 3).
3. After the remote control guide and holder is installed, put the remote control on the holder as shown in the figure.(as shown in Figure 6)

Installation method II


1. Facing the fixing hole of the remote control guide and remote control holder, drill two expansion pipe holes with diameter of 6 on the wall and insert the expansion pipe. (as shown in Figure 4)
2. Install the remote control guide and remote control holder and fix it with screws.(as shown in Figure 5)
3. After the holder is installed, put the remote control on the base as shown in the figure.

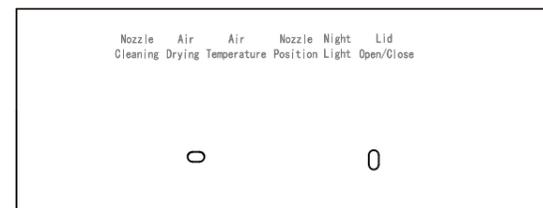


(Figure1)

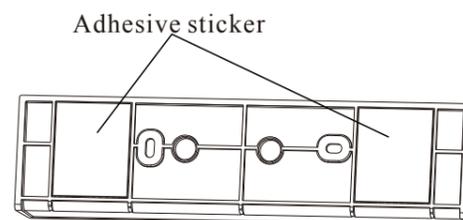


(Figure2)

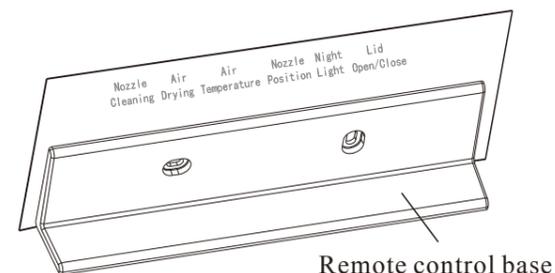


(Figure3)

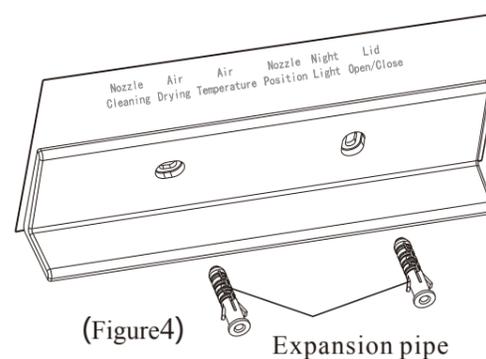

(Figure4)

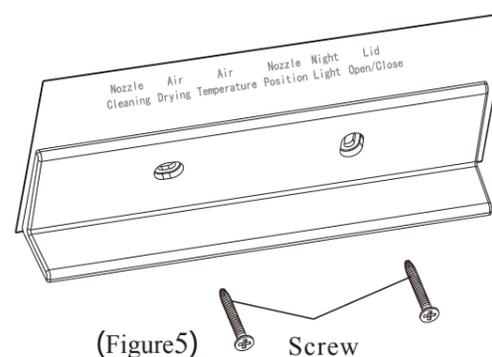

(Figure5)

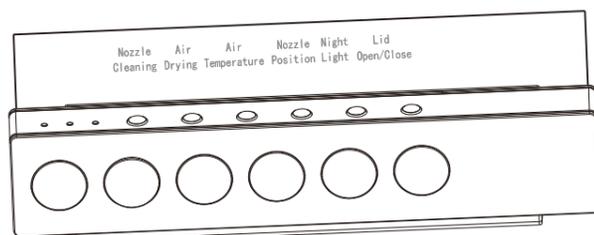

(Figure6)

Confirmation before use


Open valve

Open the inlet valve to provide water for the whole machine.

Confirmation and commissioning


1. Check power supply.

Confirm that the power plug is plugged in tightly and the indicator light on the plug is on, indicating that the system has been powered on. If the indicator light is not on, you can press the "reset" button on the plug to power on. After power on, you can hear the "tick" sound of the system buzzer.

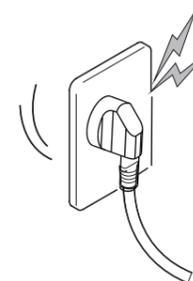


2. Human-body seating sensor

In the area shown in the figure, someone raises the seat sensing. The system function can be enabled only when the system senses that someone is seated.

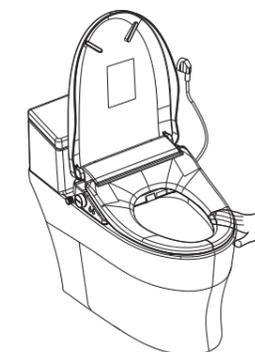


3. Check basic functions

When the human body seating sensing is on, press the "Wash" or "Dry" function on the quick panel to start the corresponding function.

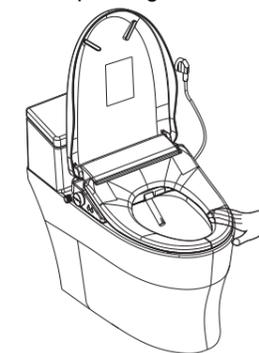

4. Check the drying function

When the human body is seated in the conduction state, press the "Dry" function on the quick panel to start the corresponding function.

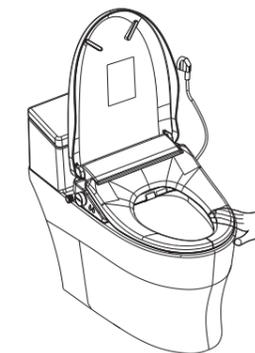

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:


- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.


How to use

Quick use of knob

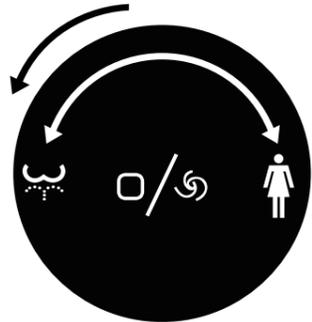


Seated

Turn backward to start rear wash function, and turn again to reduce water pressure.

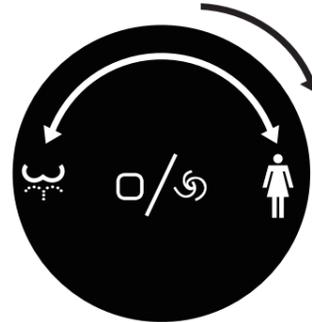



Seated

Turn forward to start the front wash function, and turn again to increase the water pressure.

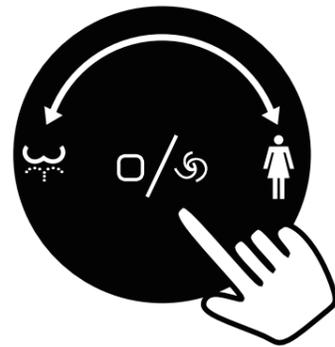

Seated

Long press for 2 seconds to get into Enema Wash, rotate again to adjust water pressure.
In non washing state: Press once to start the drying mode.
In washing state, press once to stop the current mode, and press again to start the drying mode.

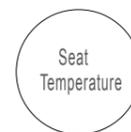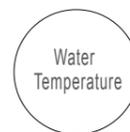

How to use the button

Water temperature button: Short press the button to switch the water temperature to level1, level2, level3, off, and cycle in turn.

Long press the button to switch the nozzle moving or fixed cleaning state when using the rear wash/front wash function .

Seat temperature button: Short press the button to switch the seat temperature to level1, level2, level3, off, and cycle in turn.

Long press the button to switch the nozzle position to level1, level2, level3, level2, level1, and cycle in turn when using the rear wash/front wash function.


How to use

Function	Name	Description
Basic Function	Rear Wash	Wash people's anus
	Front Wash	Special wash for women
	Enema Wash	Special wash for Constipation
	Warm Air Drying	Blow warm air to dry people's hip
	Water Pressure	Adjust the water volume and pressure
	Nozzle position	Adjust the washing position
	Moving Washing	Moving the nozzle forth and back while washing
Convenient Function	Water Temperature	Adjust the water temperature
	Seat Temperature	Adjust the seat temperature
	Air Temperature	Adjust the air temperature
	Remote	Convenient to use all function by a remote
	Status Indication Light	The decorative light of the knob glows white when no one is seated red in rear wash function blue in front wash function and flashes red when a fault occurs
Care Function	Seat Heating	Make people not feel cold
	Lid Slow Close	The damping device is used to make the seat ring the lid flips smoothly and the noise is small
	Decorative Light	Soft lighting
Safety Function	Overheating Protection	Thermal fuse to prevent the water temperature and seat temperature from being too high
	Anti-scald System	After sitting for 15 minutes the seat temperature will be automatically adjusted to level 1.
Secondary	Control Knob	The knobs and buttons on the side of the toilet lid can be Function used when the remote control fails
	Manual Flushing	Manual flushing during power outages
Clean Function	Troubleshooting	Sense abnormality and remind
	Nozzle self-cleaning	The nozzle will be cleaned by strong water pressure before and after use
	Nozzle cleaning	Clean the nozzle


How to use

How to use the control remote

The function of the remote controller shall be subject to the actual object.
Remote for Model WL-GB05-5AD-US

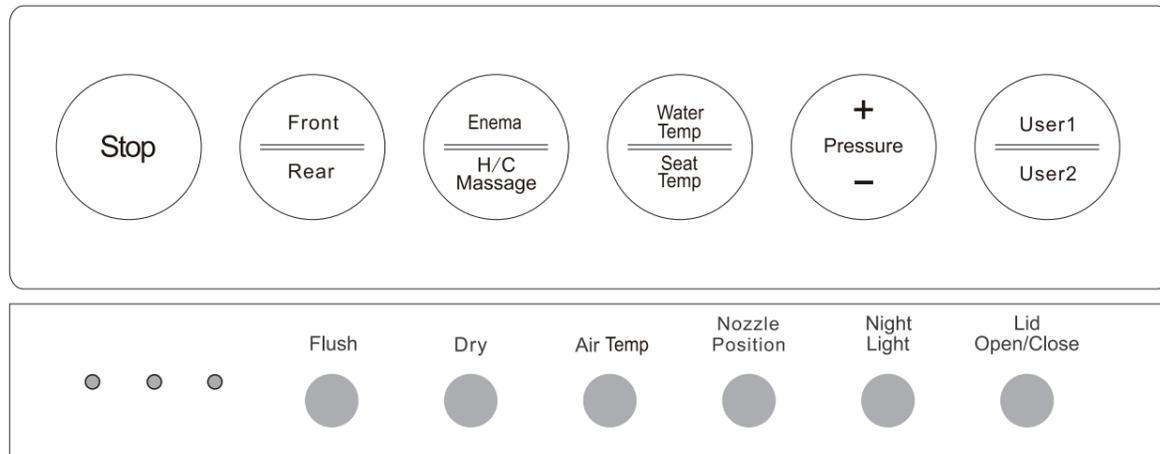

Remote for Model WL-GB05-4AD-US

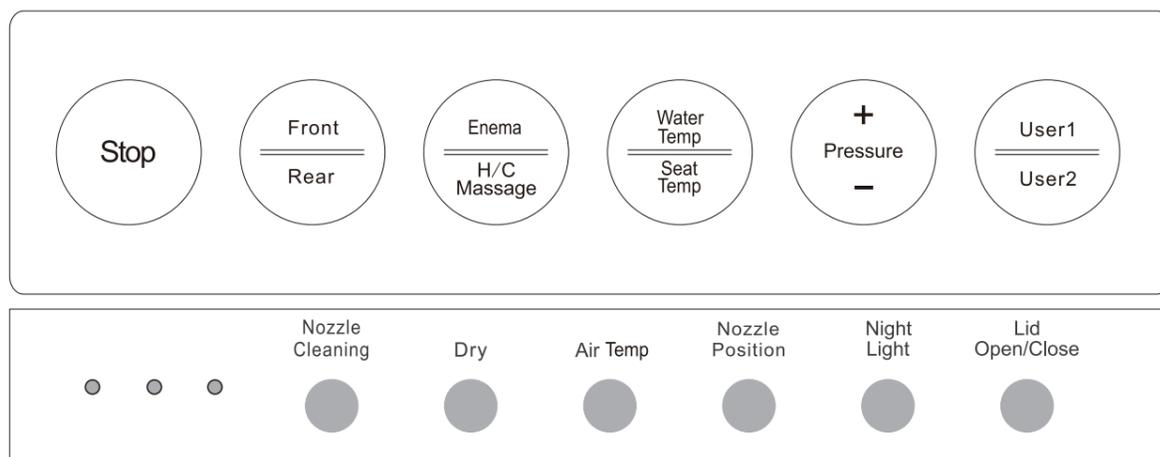

How to use

■ Stop	<ul style="list-style-type: none"> Press the stop button to end the running function such as "rear wash", "front wash", "air drying" and "enema wash". Long press for 2 seconds to turn on/off of beeping sound.
■ Front Wash	<ul style="list-style-type: none"> When the user is sitting on the seat, press the Front button, the female washing function will be started after a beeping and run for 90 seconds. If user leaves the seat during the function is running, the function will be stopped. Default to moving washing, press again to turn into fixing position washing.
■ Rear Wash	<ul style="list-style-type: none"> When the user is sitting on the seat, press the Rear button, the rear washing function will be started after a beeping and run for 90 seconds. If user leaves the seat during the function is running, the function will be stopped. Default to moving washing, press again to turn into fixing position washing.
■ Enema Wash	<ul style="list-style-type: none"> When the user is sitting on the seat, press the Enema button, the enema washing function will be started after a beeping and run for 90 seconds. If user leaves the seat during the function is running, the function will be stopped.
■ H/C Massage	<ul style="list-style-type: none"> When the "rear wash" or "front wash" function is started, press the 'H/C Massage' button to start or stop this massage function, and the water temperature changes alternately at 32-38 °C.
■ Water Temperature	<ul style="list-style-type: none"> Press the water temperature button to increase the water temperature in the "rear ", "front " and "enema" modes. It has three levels and stand-by mode. 3 level is the highest and stand-by mode means all the indicated lights are off.
■ Seat Temperature	<ul style="list-style-type: none"> Press the seat temperature button to change the temperature of the seat. The seat temperature has 3 levels and off mode. Level 3 is the highest and off mode means all the indicated lights are off.
■ Pressure	<ul style="list-style-type: none"> Press the Pressure button "+" or "-" to change the water pressure of "rear wash" and "front wash" modes. The water pressure has three levels.
■ User 1	<ul style="list-style-type: none"> Press the user 1 button for 2 seconds to memorize the current water temperature, air temperature, seat temperature, nozzle position and water pressure. Press the user 1 button to use the memory setting.
■ User 2	<ul style="list-style-type: none"> Press the user2 button for 2 seconds to memorize the current water temperature, air temperature, seat temperature, nozzle position and water pressure. Press the user 2 button to use the memory setting.
■ Flush	<ul style="list-style-type: none"> Press the "Flush" button to start flushing once. The time interval between reopening flushing function should be greater than 30 seconds. Long press for 2 seconds to turn on/off of auto-flushing function.
■ Dry	<ul style="list-style-type: none"> When the user is sitting on the seat, press the "Dry" button, the air drying function will be started after a beeping and run for 3 minutes. If the user leaves the seat during the function is running, the function will be stopped.
■ Air Temperature	<ul style="list-style-type: none"> Press the air temperature button to change the air outlet temperature in "Dry" mode. The outlet air temperature has 3 levels and off mode. level 3 is the highest and off mode means all the indicated lights are off.
■ Nozzle Position	<ul style="list-style-type: none"> Press the nozzle position button to move the nozzle forward in the "rear wash" "front wash" and "enema wash" modes. It has three levels from 1 to 3 indicated lights on. The nozzle moves forward for one level when press each time, and then returns to level 1 after level 3.
■ Nozzle Cleaning	<ul style="list-style-type: none"> WL-GB05-5AD-US: Long press "nozzle position" button for 2 seconds, and the nozzle will come out. Then the cleaning hole will spray water to clean the nozzle for 10 seconds. Press stop button to stop it when it is running. WL-GB05-4AD-US: Press "nozzle cleaning" button, and the nozzle will come out. Then the cleaning hole will spray water to clean the nozzle for 10 seconds. Press stop button to stop it when it is running.
■ Night light	<ul style="list-style-type: none"> Turn on or turn off the decorative light of the control knob.
■ Lid Open/close	<ul style="list-style-type: none"> Press the lid open/close button to open the toilet lid, and then press the button again to close it. Press for 3s to start or stop the auto lid open/close function.
■ Code Matching	<ul style="list-style-type: none"> Press and hold the "front wash" button on remote control for 3 seconds, and the three indicators on the remote control will flash red. At the same time, the machine is powered on, and the buzzer will make a long beeping to indicate that the code is successfully paired. Otherwise, repeat the above actions again.


(Some models without this function)

Cleaning procedure

Product Cleaning


1. Power cut

Unplug the power plug before cleaning the product body.

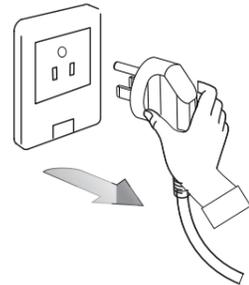


2. Nozzle Cleaning

Press the "nozzle cleaning" button on the panel of the remote control, and the nozzle will automatically come out to facilitate the user to clean. Use a soft cloth or soft bristled toothbrush to dip into the kitchen and wipe the nozzle with detergent. You can also remove the nozzle for cleaning. The method is holding the spray lance in one hand (not shaking) and pull out the spray nozzle with the other hand, and the spray nozzle will be taken out. After cleaning, it can be installed back. Finally, press the "stop" button, and the spray lance will return automatically.

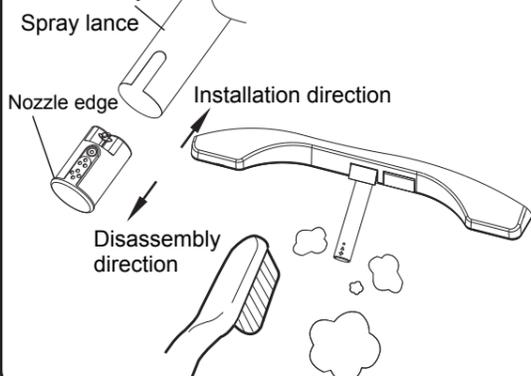


3. Clean the external parts of the product

Clean the product with a soft cloth and neutral detergent. Do not use hydrogen chloride cleaner, thinner, benzene, sandpaper, polishing machine, perfume and insecticide and other cleaning products.

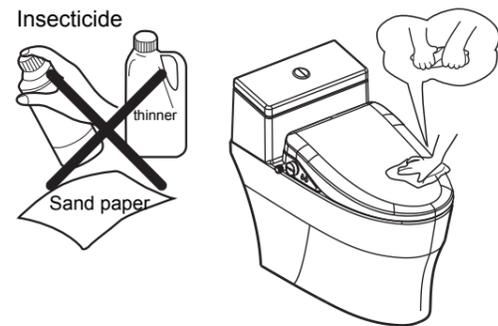

4. Clean the filter screen


When users feel that the water flow is less than normal during use, they can clean both ends of the filter screen with a brush. The product must be completely separated from the water supply hose during cleaning. If the product is connected to an external filter, please replace it regularly according to the water quality.

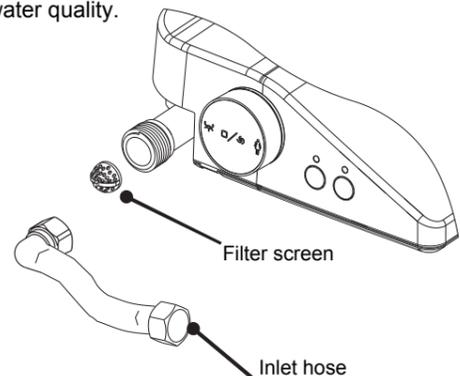


Not in use for long time

Drain and cut off the power supply


1. Pull the plug out.

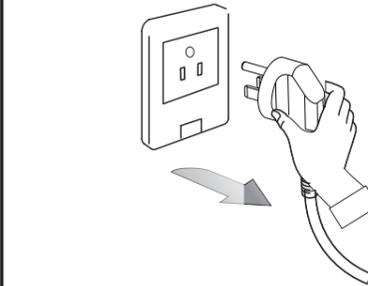

2. Close the valve and stop supplying water to the system. Remove the water inlet hose from the water inlet valve and drain the water in the hose.

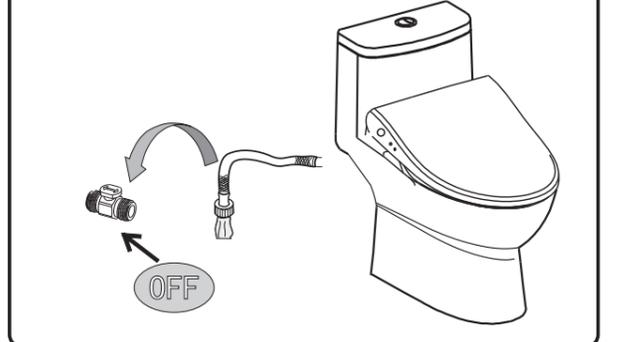

2. Press and hold the push rod in the direction of arrow 1, and then horizontally remove the toilet in the opposite direction of the water tank (arrow 2).

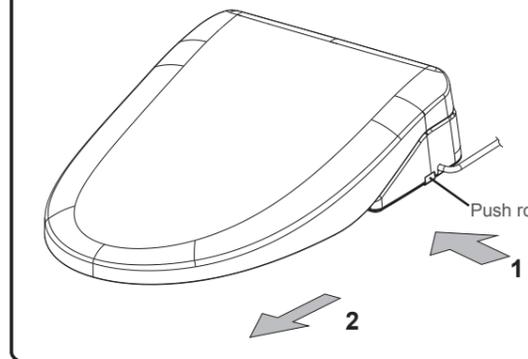

CAUTION

When using the product again, please confirm and test run (refer to the part Product Installation).



Quick judgment and maintenance for the troubles

If you think there is a fault, please read the following items first and take measures. If the fault cannot be solved, please contact the purchase place, exclusive store or our customer service center.


※Please unplug the power cord before maintenance.

⚠ CAUTION

※ When the power cord is damaged, it shall be replaced by the manufacturer, after-sales service center or professional personnel (with qualification certificate) to avoid safety accidents.

※ In case of water leakage, first rotate the handle of the inlet valve clockwise, close the valve and stop water supply.

! Important

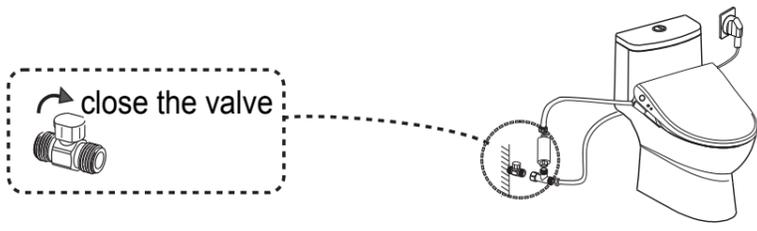


● Please confirm the following precautions before maintenance

Fault Problem	Checking	Solution
Power		
Function non-responding	<ul style="list-style-type: none"> Is there power outage? Is there power in the power socket? Is the main power turned on? 	<ul style="list-style-type: none"> Please wait until power is restored. Please turn on the power socket. Please turn on the main power.
Rear wash/Front wash/Enema wash		
No water	<ul style="list-style-type: none"> Is water cut off? Is water valve closed? Did you not touch the sensing area? 	<ul style="list-style-type: none"> Please wait for water. Please open the water valve. Please sit on the sensing area.
Water pressure is decreasing	<ul style="list-style-type: none"> Is the warm water switch off or the water temperature setting is low? Is the filter or external filter clogged? 	<ul style="list-style-type: none"> Turn up the water pressure by control knob or remote control. Clean the filter; Change the external filter regularly
Water temperature is low	<ul style="list-style-type: none"> Is the warm water switch off or the water temperature setting is low? 	<ul style="list-style-type: none"> Adjust the water temperature by control button or remote control
Stop spraying water after 90s of washing	<ul style="list-style-type: none"> Just a setting. Not a fault problem 	<ul style="list-style-type: none"> Use the washing functions again

Quick judgment and maintenance for the troubles

Fault Problem	Checking	Solution
Water stop during washing	<ul style="list-style-type: none"> Probably that the human body doesn't touch the sensing area of the seat ring 	Adjust sitting position to make sure sitting on the sensing area
Seat Sensor		
It activates the washing without being seated.	<ul style="list-style-type: none"> Is the seat be splashed with water or has a wet towel on it? 	<ul style="list-style-type: none"> Please wipe the water off with dry towel; Please take the wet towel away.
Auto flush function		
Auto flush is not activated	<ul style="list-style-type: none"> Auto flush module not installed or not installed correctly; Some models doesn't have this function. 	<ul style="list-style-type: none"> Please install the auto flush module according to the instruction above.
Seat heating		
Seat temperature is low	<ul style="list-style-type: none"> Is the warm seat switch off or the seat temperature setting is low? 	<ul style="list-style-type: none"> Adjust the water temperature by control button or remote control;
Remote control		
Remote control not responding	<ul style="list-style-type: none"> Is the battery on the remote control depleted? Is the battery installed incorrectly? Probably that the human body doesn't touch the sensing area of the seat ring? 	<ul style="list-style-type: none"> Replacement battery. Please install the battery correctly. Adjust sitting position to make sure sitting on the sensing area.

Quick judgment and maintenance for the troubles

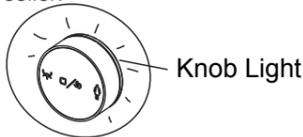Fault Problem	Checking	Solution	
Warm air drying			
Air temperature is low	<ul style="list-style-type: none"> Is the air temp. setting low? 	<ul style="list-style-type: none"> Adjust the air temp. by remote control. 	
Function stops during drying	<ul style="list-style-type: none"> Normally it stops after 3 mins of drying 	<ul style="list-style-type: none"> Use this function again. Adjust sitting position to make sure sitting on the sensing area 	
Air drying is not activated	<ul style="list-style-type: none"> Probably that the human body doesn't touch the sensing area of the seat ring 	<ul style="list-style-type: none"> Adjust sitting position to make sure sitting on the sensing area 	
Others			
Dirt not cleaned	<ul style="list-style-type: none"> Is the water valve fully open? Is the water valve filter blocked? Water pressure too low when sharing water with bathroom. 	<ul style="list-style-type: none"> Open the water valve Clean the filter 	
Water is dirty	<ul style="list-style-type: none"> The external filter is used over 6 months. 	<ul style="list-style-type: none"> Replace a new filter 	
Water pipe connection leaking	<ul style="list-style-type: none"> Is the nut of the connecting pipe not tightened? 	<ul style="list-style-type: none"> Tighten it 	
If there is any abnormal situation other than the above table, please contact the seller.			
 <p>Knob Light</p>			
Troubleshooting			
Alert	Knob light alert	Buzzer	Fault description
Seat temp. sensor alert	<ul style="list-style-type: none"> Flash red once 	1 beep	<ul style="list-style-type: none"> Sensor open or short circuit will alarm and stop seat heating
Air temp. sensor alert	<ul style="list-style-type: none"> Flash red twice 	1 beep	<ul style="list-style-type: none"> Sensor open or short circuit will alarm and stop air drying
Water temperature sensor alarm	<ul style="list-style-type: none"> Flash red three 	1 beep	<ul style="list-style-type: none"> The outlet water temperature is greater than 45 °C. (After 3 subsequent alarms, it returns to normal if there is no abnormality)

WARNING

- Do not disassemble, repair or refit the product by yourself.
- May cause electric shock, fire or failure.



Technical parameters

Model	WL-GB05-4AD-US	WL-GB05-5AD-US
Technical parameters		
Rated power	120V~ 60Hz	
Rated power	1220W (The inlet water temperature is 15 °C, the outlet water temperature is at the maximum level, the water pressure is 0.2MPa, the water pressure is at the maximum level, and 30 seconds before the Rear wash operation).	
Power line length	1.2m	
Warm water heating mode	Instant heating	
Water temperature	The temperature adjustment range is about 30 °C - 39 °C	
Safety device	Flow monitoring sensor, water temperature sensor, bimetal temperature control switch, temperature fuse.	
Air temperature	Adjustable temperature range (room temperature-55°C)	
Drying heating power	200W	
Seat ring surface temperature	Adjustable temperature range (room temperature-40°C)	
Seat ring heating power	40W	
Water supply pressure	0.15MPa-0.75MPa	
Environment temperature	1-40 °C	
Product size	L505xW375xH93mm	
Product net weight	4.2kg	4.4kg

The bar codes on our products and outer boxes are only for internal use, not for other purposes.

