


Installing Neo Series Cold Water Bidets (Models 110, 120, 180, 185)

Step 1

Turn Off the Toilet Tank Water Supply

Shut off the toilet tank water supply. Flush the toilet to empty the tank.

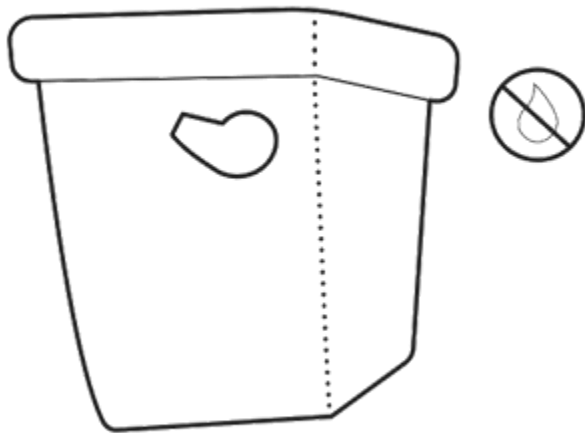

Step 2

Remove the Toilet Seat


Remove the seat by unscrewing the toilet seat bolts from the hinges.



Step 3

Mount Your Luxe Bidet


Place the bidet on the toilet. The plates are adjusted depending on where the two holes on the back of the toilet seat are.

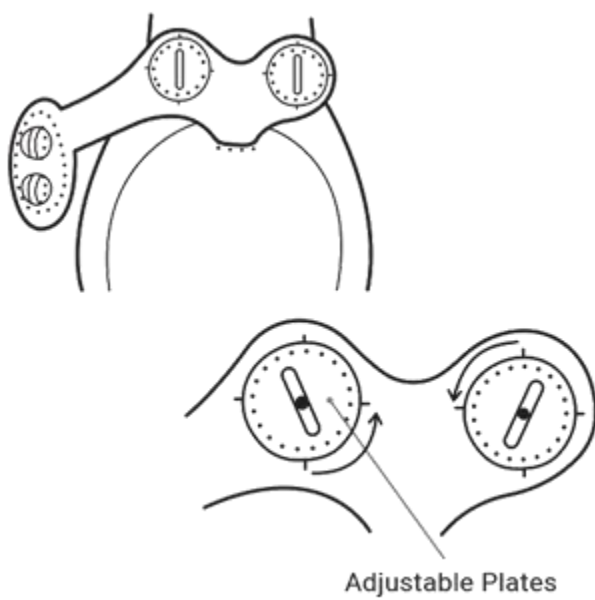

Step 4

Reattaching Your Toilet Seat


The bidet should now be aligned with the coupling holes. Screw the toilet seat back on the bidet and the toilet.

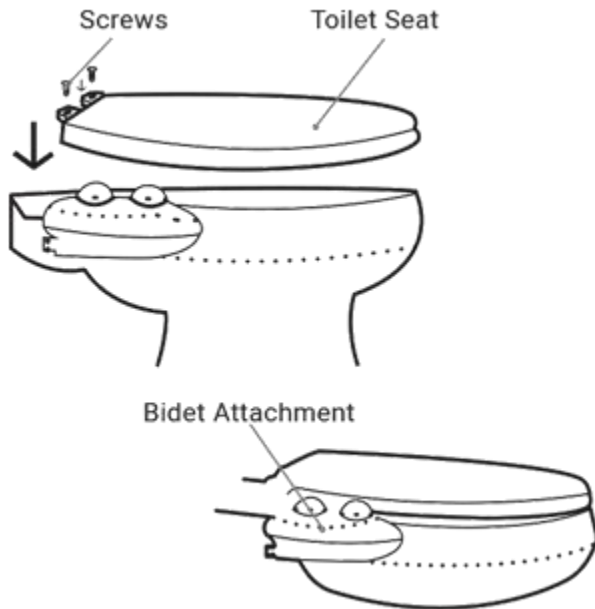

Step 5

Checking the T-Adapter


Make sure that there is a black rubber washer inserted at the top of the t-adapter. If it is not already there, insert the black rubber washer so it is securely in place as shown in the picture below.

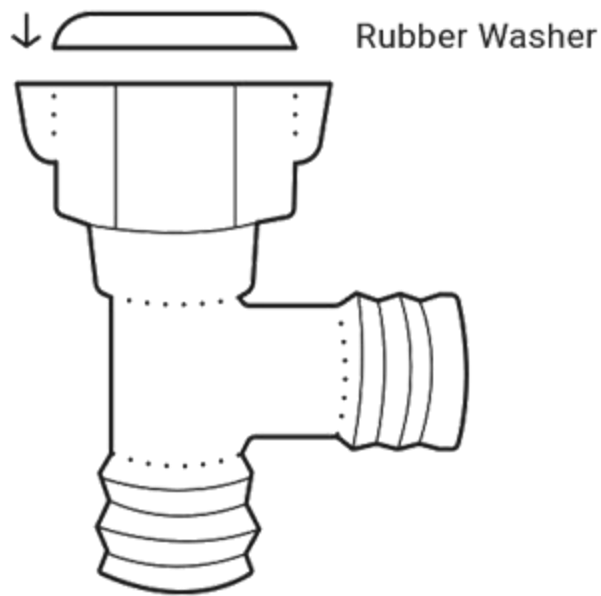

Step 6

Disconnecting the Water Supply


Make sure you have shut off the toilet tank water supply and flushed the toilet to empty the tank if you have not done so already. Place a towel or bucket underneath the toilet tank connection to catch any residual water. Disconnect the water connection hose from the toilet tank.

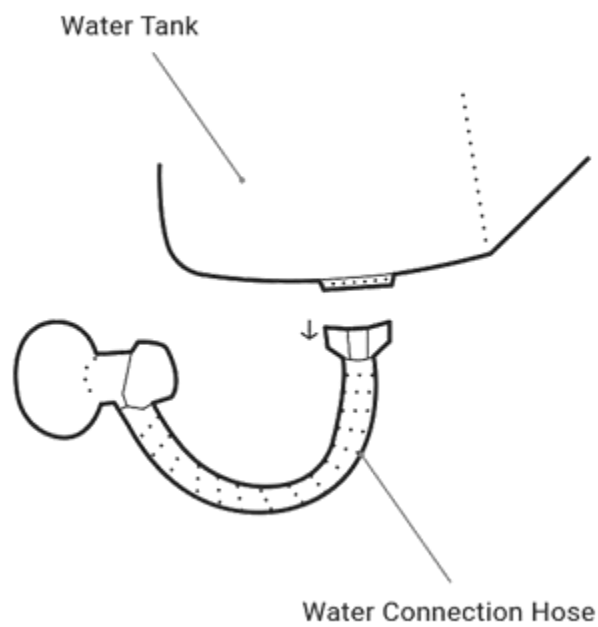

Step 7

Connecting the Water Supply

Connect the top part of the t-adapter to the toilet tank and connect the bottom part to the toilet water supply valve.

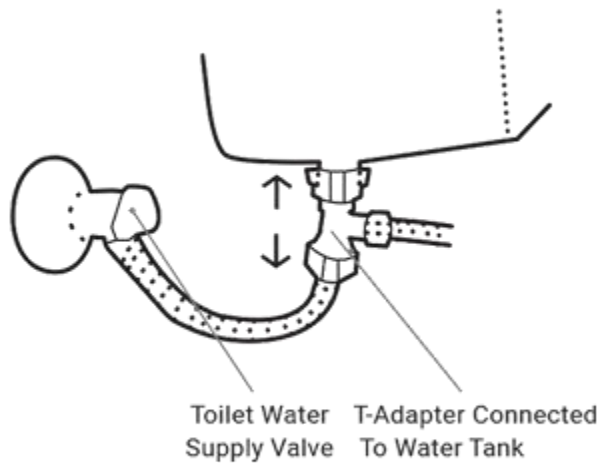


Step 8

Connecting the Water Supply to the Bidet

Connect the metal braided hose to the t-adapter.

Connect the metal braided hose to the bidet inlet.

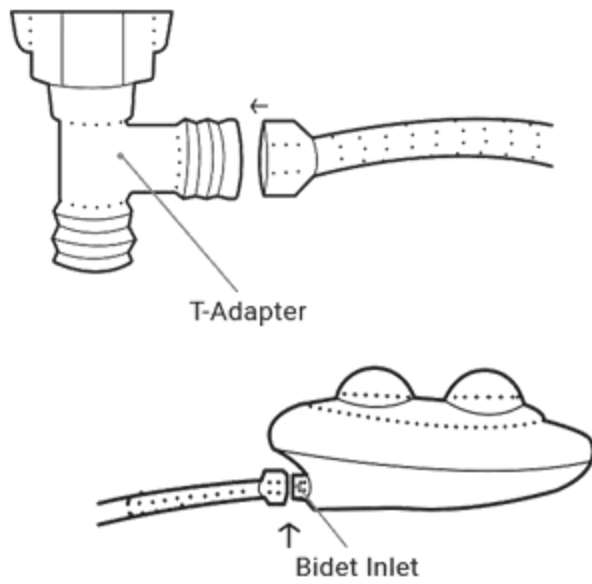

Step 9

Turning On the Toilet Tank Water Supply

Turn on the toilet tank water supply.

Congratulations! You are ready to use the Luxe Bidet for the first time. Gently turn the water pressure control knob to reach your desired spray pressure.

