

USABidet® H-2 Toilet Seat Mounted Bidet Installation Instructions

The USABidet® H-2 model is designed to be operated with both hands. It has a ceramic valve that admits water to the fountain when rotated. The pressure can be controlled by how far in the valve is rotated. To operate, just slowly turn the valve while rotating the hoop assemble with the other hand.

You can have a plumber install the USABidet® but most folks are handy enough to do the installation themselves. Please read through the entire instruction process before you begin.

Tools Required: Two Screwdrivers, one Phillips head and one standard head
Hand drill with 7/64" bit
Two 8" crescent wrenches (or appropriately sized end wrenches)

Step by Step Instructions

1. Shut off the water supply to the toilet. This valve is usually located below the toilet tank on the left side of the toilet when facing the toilet. Flush the toilet to drain the tank.

2. Using the wrenches, unscrew the fitting on the flexible line to the toilet where it connects to the water supply valve you have just shut off.



4. Hold the hoop so the ball nozzle is approximately perpendicular to the center of the toilet seat. This insures that the nozzle will track on the

center line when it's rotated into position. Locate the hinge brackets and position them so the mounting holes are about 1 1/4" from the outside edge of the seat. Use tape to hold the brackets in place and mark the holes with a pencil. Note: If you have trouble holding the bidet in place, you may want to take the seat off and place it flat on the floor.



3. Install the "Tee" supplied with the USABidet® and reinstall the fitting on the flexible line to the toilet on the upper connection of the "Tee."

5. Drill a 7/64" hole at each pencil mark. Use caution and don't drill deeper than necessary.

Attach the brackets.

Replace the seat (if necessary).



Continued on back


6. Rotate the spring one turn so that it will apply pressure to the hoop and hold it against the underside of the seat when not in use. The "U" end of the spring should be mounted under the bracket as shown. Using the screws provided, mount the bracket and spring securely to the seat. Test by rotating the hoop several times. The spring should hold it firmly to the underside of the seat when not in use.



That's all there is to installing your USABidet®!

The spring holds it out of the way when you aren't using it as a bidet. Cleaning of the hoop is not a problem. Just clean with a paper towel and regular toilet cleaner every time you clean the bowl.

Please read on before restoring water to the unit.

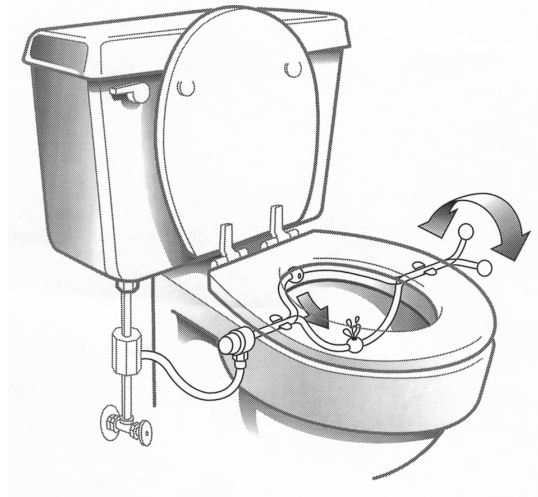

You should test the USABidet®: It's not a good idea to test the unit without someone on the seat since the fountain can shoot several feet in the air.

Slowly turn on the primary water supply and allow the tank to fill. After the toilet tank is full, turn the water supply off and sit on the seat. Rotate the bidet until the nozzle is pointing vertically. Turn the bidet valve handle all the way open. Slowly open the primary water supply valve until the water fountain is at the maximum pressure you require.

CAUTION: High water pressure may harm sensitive human tissue and should not be used. Leave the water supply valve in its adjusted position. This may result in a slightly longer filling time for the toilet tank.

USABIDET® Start the day without the morning paper.™